

A: Touchscreen – swipe or tap on the display to access functions

B: Power button: long press to turn watch on or off /one step back in menu/ end or reject calls




C: SOS button: 3 sec. long press activates SOS call  
D: Enter menu



1. Unscrew back cover
2. Place a Nano SIM card in the correct direction
3. Screw back cover, and restart Aiko Watch
4. Signal with minimum one bar indicates a network connection

Make sure a PIN code is not needed to access the SIM card.

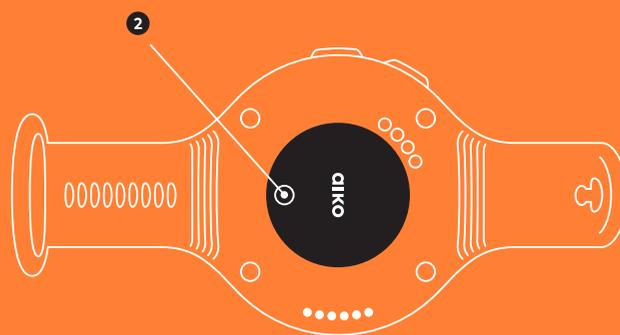

1. On your smartphone, download "Aiko watch" app from Android / iOS app store.

2. Follow the instructions to register a new user and log into the app.



3. In the app, press the + button to add a new watch.

4. Scan the QR code that appears on the watch display when you power on. QR code is also printed on the retail box.

5. In the app, follow the instructions for setting up your child's personal info. You are now the administrator of this Aiko watch.



New contacts can be added only from the Android/iOS app > Contacts. You can add up to 30 guardians who can call your child (app not needed), or see child's location and send voice chats (for which you need the app installed on the guardian's smartphone).

Download and install the Aiko watch app on the guardian's smartphone, and follow steps 1-5 from previous page. You will find the QR code in the app of the administrator (Child user setting > QR code). After completion, the new guardian is displayed as a contact on Aiko watch.

Your child can voice chat with up to 5 friends wearing an Aiko watch. To pair two watches, bring them together (cca. 5cm), and press the Make friends button on one watch. Aiko watch will show a successful connection.

On your Aiko watch, home screen shows the time, date and number of steps your child made today. Swipe right to access these functions: Call (Phone calls), Voice chat and Make friends (pairs two Aiko watches). Clock can be adjusted from the app. To change Aiko watch language, swipe down on the display 8 times, and choose your language.



Language

Swipe right until you see language screen, and then swipe up to switch languages.



Phone calls and Voice chat

In Call menu, swipe left and right to switch between contacts. Tap the screen to start a call.



In Voice chat menu, select a contact with a screen tap. Then press and hold to record a voice message and release in order to send it. If you want to cancel the voice message, swipe up during the recording.



Main menu

1. App settings
2. Watch location address and type of positioning
3. Watch location
4. Step counter
5. Map menu
6. Currently active watch, child user settings
7. Voice messages and notifications
8. Add or edit contacts shown on Aiko watch
8. Tools for managing currently active watch



Hello!  
Congratulations on your new Aiko Watch.  
Let's show you how to use it!


For more information, our Privacy Policy and Terms and Conditions of use, please visit us on

[aikowatch.com](http://aikowatch.com)



**AIKO**

Quick User Guide

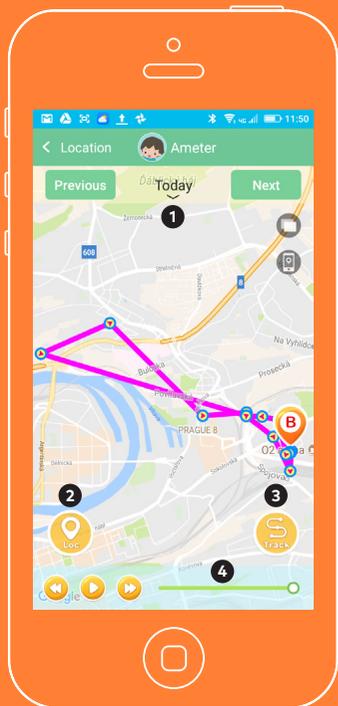

#### Map menu

1. Choose a date to show track history
2. Request location update
3. Shows track history on the map
4. Track history timeline

8

Aiko uses three technologies to determine the location of the watch\*.

	GPS/AGPS	Wi-fi	LBS
Needs	Satellites	Wi-fi signal	Operator 2G network
Accuracy	Up to 10 m	5 to 50 m	Inaccurate
Indoors	No	Yes	Yes

If Aiko watch is indoors, location is determined only by the nearest Operator base station, or a functioning and registered wi-fi router (if available). Same applies also in cases when access to satellite signal is omitted by objects, surrounding buildings, tree canopy and bad weather. For the watch to receive a correct GPS location, we recommend that Aiko is worn on child's wrist, and child is outside for more than 15 minutes.

Aiko Watch must be locked on to the signal of at least 4 satellites, in order to calculate your location on the map. A static (not moving) watch will not send location updates, in order to save battery power.

For more detailed explanation visit us at [aikowatch.com](http://aikowatch.com)

\*Limitations apply. Please refer to our Terms and conditions of use at [aikowatch.com](http://aikowatch.com)

9



Long press on button C (3 sec.) to activate an SOS call. This will call the administrator, and will send an App notification with the SOS location to all guardians with an installed app.



From the App > Manage menu, you can setup Safe zones where your child can freely move, without you worrying. Press add Safe zone, then adjust the radius and position on the map, and press Done, to save the zone.

Whenever your child leaves a safe zone, you will receive a notification in the app. This feature works only with GPS locations, on the presumption that your child is moving outside. It does not notify if child is indoors, in order to avoid false alarms that can happen from the inaccuracy of LBS and Wi-Fi location technology.



9

10

From the App > Manage menu, you can setup an alarm or disable the watch during school classes. You can also setup a take-off alarm, which notifies you in case watch is taken off child's wrist.

Once an app is paired with a watch, the watch can be powered off only from the app.

Once an app is paired with a watch, the watch can be powered off only from the app.

To charge your Aiko Watch, place the magnetic charging mat to the back of the watch, so that metal connectors are in place. Connect the USB connector into power supply. You will see a walking tiger on the display (if the watch is powered off), or flashing battery indicator (if the watch is powered on). This means that your Aiko is charging. Please check the position of charging mat, if you don't see anything on the watch display.



11

12